

ELEVATION CERTIFICATE

Important: Read the instructions on pages 1-9.

OMB No. 1660-0008
Expiration Date: July 31, 2015

SECTION A - PROPERTY INFORMATION

FOR INSURANCE COMPANY USE

A1. Building Owner's Name Surfview Villas FMB, LLC

Policy Number:

A2. Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or P.O. Route and Box No.
5557 Estero Blvd

Company NAIC Number:

City Fort Myers Beach

State FL

ZIP Code 33931

A3. Property Description (Lot and Block Numbers, Tax Parcel Number, Legal Description, etc.)
LOTS 21 + 22, BLK 4, PB 6/PG 39, GULF HEIGHTS STRAP: 33-46-24-W1-00204.02110

A4. Building Use (e.g., Residential, Non-Residential, Addition, Accessory, etc.) ACCESSORY-DETACHED GARAGE

A5. Latitude/Longitude: Lat. 26.43075 Long. -81.913513999999996

Horizontal Datum: ☐ NAD 1927 ☒ NAD 1983

A6. Attach at least 2 photographs of the building if the Certificate is being used to obtain flood insurance.

A7. Building Diagram Number 1B

A8. For a building with a crawlspace or enclosure(s):

- a) Square footage of crawlspace or enclosure(s) 546 sq ft
b) Number of permanent flood openings in the crawlspace or enclosure(s) within 1.0 foot above adjacent grade 5
c) Total net area of flood openings in A8.b 640 sq in
d) Engineered flood openings? ☒ Yes ☐ No

A9. For a building with an attached garage:

- a) Square footage of attached garage N/A sq ft
b) Number of permanent flood openings in the attached garage within 1.0 foot above adjacent grade N/A
c) Total net area of flood openings in A9.b N/A sq in
d) Engineered flood openings? ☐ Yes ☒ No

SECTION B - FLOOD INSURANCE RATE MAP (FIRM) INFORMATION

B1. NFIP Community Name & Community Number
Town of Fort Myers Beach & 120673

B2. County Name
Lee

B3. State
FL

B4. Map/Panel Number
12071C0566

B5. Suffix
F

B6. FIRM Index Date
8/28/2008

B7. FIRM Panel
Effective/Revised Date
8/28/2008

B8. Flood
Zone(s)
VE

B9. Base Flood Elevation(s) (Zone
AO, use base flood depth)
13'

B10. Indicate the source of the Base Flood Elevation (BFE) data or base flood depth entered in Item B9.

☐ FIS Profile ☒ FIRM ☐ Community Determined ☐ Other/Source: _____

B11. Indicate elevation datum used for BFE in Item B9: ☐ NGVD 1929 ☒ NAVD 1988 ☐ Other/Source: _____

B12. Is the building located in a Coastal Barrier Resources System (CBRS) area or Otherwise Protected Area (OPA)? ☐ Yes ☒ No
Designation Date: _____ ☐ CBRS ☐ OPA

SECTION C - BUILDING ELEVATION INFORMATION (SURVEY REQUIRED)

C1. Building elevations are based on: ☐ Construction Drawings* ☐ Building Under Construction* ☒ Finished Construction

*A new Elevation Certificate will be required when construction of the building is complete.

C2. Elevations - Zones A1-A30, AE, AH, A (with BFE), VE, V1-V30, V (with BFE), AR, AR/A, AR/AE, AR/A1-A30, AR/AH, AR/AO. Complete Items C2.a-h below according to the building diagram specified in Item A7. In Puerto Rico only, enter meters.

Benchmark Utilized: H-245

Vertical Datum: 5.40'

Indicate elevation datum used for the elevations in items a) through h) below. ☐ NGVD 1929 ☒ NAVD 1988 ☐ Other/Source: _____

Datum used for building elevations must be the same as that used for the BFE.

Check the measurement used.

- a) Top of bottom floor (including basement, crawlspace, or enclosure floor) 5.00 ☒ feet ☐ meters
b) Top of the next higher floor N/A ☐ feet ☐ meters
c) Bottom of the lowest horizontal structural member (V Zones only) 15.0 ☒ feet ☐ meters
d) Attached garage (top of slab) N/A ☐ feet ☐ meters
e) Lowest elevation of machinery or equipment servicing the building N/A ☐ feet ☐ meters
(Describe type of equipment and location in Comments)
f) Lowest adjacent (finished) grade next to building (LAG) 5.50 ☒ feet ☐ meters
g) Highest adjacent (finished) grade next to building (HAG) 5.80 ☒ feet ☐ meters
h) Lowest adjacent grade at lowest elevation of deck or stairs, including structural support N/A ☐ feet ☐ meters

SECTION D - SURVEYOR, ENGINEER, OR ARCHITECT CERTIFICATION

This certification is to be signed and sealed by a land surveyor, engineer, or architect authorized by law to certify elevation information. I certify that the information on this Certificate represents my best efforts to interpret the data available. I understand that any false statement may be punishable by fine or imprisonment under 18 U.S. Code, Section 1001.


☐ Check here if comments are provided on back of form. Were latitude and longitude in Section A provided by a
☐ Check here if attachments. licensed land surveyor? ☒ Yes ☐ No



Certifier's Name R.L. Schumann License Number RLS 2239

Title Reg. Land Surveyor Company Name LIS Surveying, LLC (Job#21055)

Address 21430 Palm Beach Blvd City Alva State FL ZIP Code 33920

Signature R.L. Schumann Date 6/15/2015 Telephone 239-693-9244

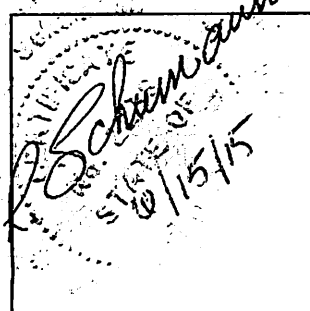

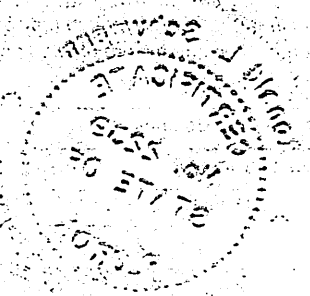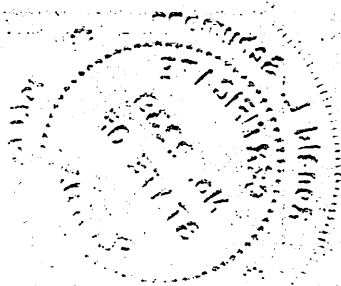

ELEVATION CERTIFICATE, page 2

IMPORTANT: In these spaces, copy the corresponding information from Section A.		FOR INSURANCE COMPANY USE
Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or P.O. Route and Box No. 5557 Estero Blvd.		Policy Number:
City Fort Myers Beach	State FL ZIP Code 33931	Company NAIC Number:

SECTION D – SURVEYOR, ENGINEER, OR ARCHITECT CERTIFICATION (CONTINUED)

Copy both sides of this Elevation Certificate for (1) community official, (2) insurance agent/company, and (3) building owner.

Comments The Accessory Structure (A/k/a Detached Garage) has a square footage of 546 sq ft with 5 permanent flood opening. The total net area of flood openings is 640 sq inches.

R.L. Schumann
Signature R.L. Schumann

6/15/15
Date 6/15/2015

SECTION E – BUILDING ELEVATION INFORMATION (SURVEY NOT REQUIRED) FOR ZONE AO AND ZONE A (WITHOUT BFE)

For Zones AO and A (without BFE), complete Items E1–E5. If the Certificate is intended to support a LOMA or LOMR-F request, complete Sections A, B, and C. For Items E1–E4, use natural grade, if available. Check the measurement used. In Puerto Rico only, enter meters.

- E1. Provide elevation information for the following and check the appropriate boxes to show whether the elevation is above or below the highest adjacent grade (HAG) and the lowest adjacent grade (LAG).
a) Top of bottom floor (including basement, crawlspace, or enclosure) is _____ ☐ feet ☐ meters ☐ above or ☐ below the HAG.
b) Top of bottom floor (including basement, crawlspace, or enclosure) is _____ ☐ feet ☐ meters ☐ above or ☐ below the LAG.
- E2. For Building Diagrams 6–9 with permanent flood openings provided in Section A Items 8 and/or 9 (see pages 8–9 of Instructions), the next higher floor (elevation C2.b in the diagrams) of the building is _____ ☐ feet ☐ meters ☐ above or ☐ below the HAG.
- E3. Attached garage (top of slab) is _____ ☐ feet ☐ meters ☐ above or ☐ below the HAG.
- E4. Top of platform of machinery and/or equipment servicing the building is _____ ☐ feet ☐ meters ☐ above or ☐ below the HAG.
- E5. Zone AO only: If no flood depth number is available, is the top of the bottom floor elevated in accordance with the community's floodplain management ordinance? ☐ Yes ☐ No ☐ Unknown. The local official must certify this information in Section G.

SECTION F – PROPERTY OWNER (OR OWNER'S REPRESENTATIVE) CERTIFICATION

The property owner or owner's authorized representative who completes Sections A, B, and E for Zone A (without a FEMA-issued or community-issued BFE) or Zone AO must sign here. The statements in Sections A, B, and E are correct to the best of my knowledge.

Property Owner's or Owner's Authorized Representative's Name

Address	City	State	ZIP Code
Signature	Date	Telephone	

Comments

☐ Check here if attachments.

SECTION G – COMMUNITY INFORMATION (OPTIONAL)

The local official who is authorized by law or ordinance to administer the community's floodplain management ordinance can complete Sections A, B, C (or E), and G of this Elevation Certificate. Complete the applicable item(s) and sign below. Check the measurement used in Items G8–G10. In Puerto Rico only, enter meters.

- G1. ☐ The information in Section C was taken from other documentation that has been signed and sealed by a licensed surveyor, engineer, or architect who is authorized by law to certify elevation information. (Indicate the source and date of the elevation data in the Comments area below.)
- G2. ☐ A community official completed Section E for a building located in Zone A (without a FEMA-issued or community-issued BFE) or Zone AO.
- G3. ☐ The following information (Items G4–G10) is provided for community floodplain management purposes.


G4. Permit Number	G5. Date Permit Issued	G6. Date Certificate Of Compliance/Occupancy Issued
-------------------	------------------------	---

- G7. This permit has been issued for: ☐ New Construction ☐ Substantial Improvement
- G8. Elevation of as-built lowest floor (including basement) of the building: _____ ☐ feet ☐ meters Datum _____
- G9. BFE or (in Zone AO) depth of flooding at the building site: _____ ☐ feet ☐ meters Datum _____
- G10. Community's design flood elevation: _____ ☐ feet ☐ meters Datum _____

Local Official's Name	Title
Community Name	Telephone
Signature	Date

Comments

☐ Check here if attachments.

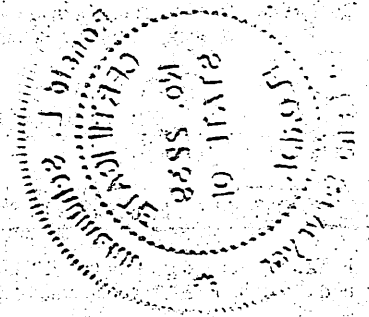

Building Photographs

See Instructions for Item A6.

IMPORTANT: In these spaces, copy the corresponding information from Section A.

FOR INSURANCE COMPANY USE

Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or P.O. Route and Box No.
5557 Estero Blvd.

Policy Number:

City Fort Myers Beach


State FL

ZIP Code 33931

Company NAIC Number:

If using the Elevation Certificate to obtain NFIP flood insurance, affix at least 2 building photographs below according to the instructions for Item A6. Identify all photographs with date taken; "Front View" and "Rear View"; and, if required, "Right Side View" and "Left Side View." When applicable, photographs must show the foundation with representative examples of the flood openings or vents, as indicated in Section A8. If submitting more photographs than will fit on this page, use the Continuation Page.

FRONT VIEW 6/12/2015

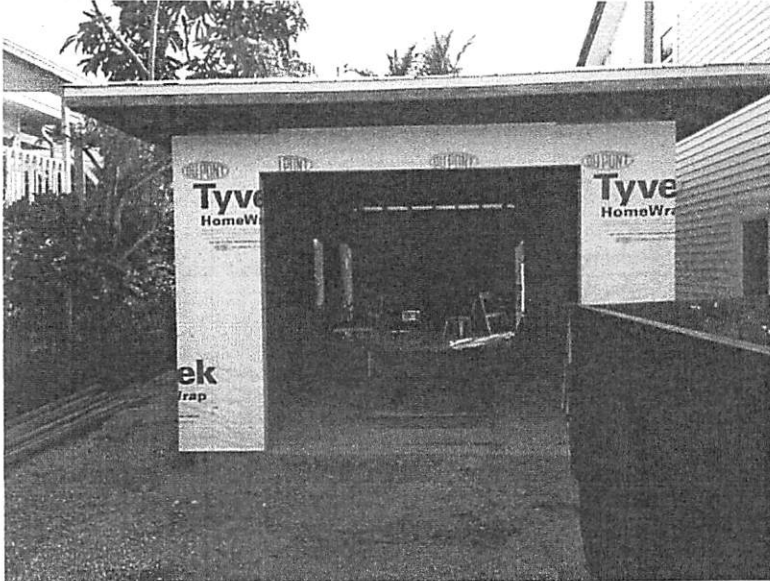

REAR VIEW 6/12/2015



Building Photographs

Continuation Page

IMPORTANT: In these spaces, copy the corresponding information from Section A.Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or P.O. Route and Box No.
5557 Estero Blvd.

City Fort Myers Beach

State FL

ZIP Code 33931


FOR INSURANCE COMPANY USE

Policy Number:

Company NAIC Number:

If submitting more photographs than will fit on the preceding page, affix the additional photographs below. Identify all photographs with: date taken; "Front View" and "Rear View"; and, if required, "Right Side View" and "Left Side View." When applicable, photographs must show the foundation with representative examples of the flood openings or vents, as indicated in Section A8.

VENT VIEW 6/12/2015

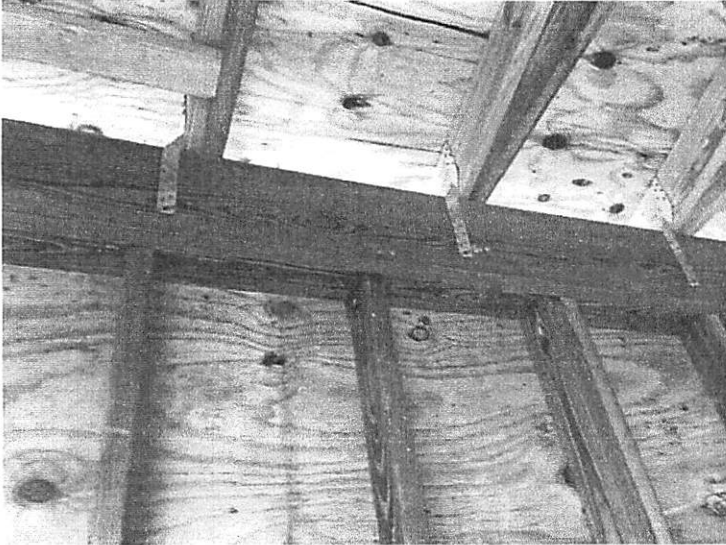

ICC-ES Evaluation Report**ESR-2074 FBC Supplement**

Issued July 1, 2013

This report is subject to renewal February 1, 2015.

www.icc-es.org | (800) 423-6587 | (562) 699-0543

A Subsidiary of the International Code Council®

DIVISION: 08 00 00—OPENINGS

Section: 08 95 43—Vents/Foundation Flood Vents

REPORT HOLDER:

SMARTVENT PRODUCTS, INC.
430 ANDBRO DRIVE, UNIT 1
PITMAN, NEW JERSEY 08071
(877) 441-8368
www.smartvent.com
info@smartvent.com

EVALUATION SUBJECT:

SMART VENT® AUTOMATIC FOUNDATION FLOOD VENTS: FLOODVENT™ MODEL #1540-520; FLOODVENT™ STACKING MODEL #1540-521; SMARTVENT™ MODEL #1540-510; SMARTVENT™ STACKING MODEL #1540-511; WOOD WALL FLOOD MODEL #1540-570; WOOD WALL FLOOD OVERHEAD DOOR MODEL #1540-574; FLOODVENT™ OVERHEAD DOOR MODEL #1540-524; SMARTVENT™ OVERHEAD DOOR MODEL #1540-514

1.0 REPORT PURPOSE AND SCOPE**Purpose:**

The purpose of this evaluation report supplement is to indicate that Smart Vent® Automatic Foundation Flood Vents, recognized in ICC-ES master report ESR-2074, have also been evaluated for compliance with the codes noted below.

Applicable code editions:

- 2010 Florida Building Code—Building (FBC)
- 2010 Florida Building Code—Residential (FRC)

2.0 CONCLUSIONS

The Smart Vent® Automatic Foundation Flood Vents, described in Sections 2.0 through 7.0 of the master evaluation report ESR-2074, comply with the FBC and the FRC, provided the design and installation are in accordance with the *International Building Code*® provisions noted in the master report.

Use of the Smart Vent® Automatic Foundation Flood Vents has also been found to be in compliance with the High-Velocity Hurricane Zone provisions of the FBC and the FRC for structures not subject to FBC Section 2326.3.1 or FRC Section 4409.13.3.1, as applicable.

For products falling under Florida Rule 9N-3, verification that the report holder's quality assurance program is audited by a quality assurance entity approved by the Florida Building Commission for the type of inspections being conducted is the responsibility of an approved validation entity (or the code official when the report holder does not possess an approval by the Commission).

This supplement expires concurrently with the master report, reissued December 1, 2012, revised July 2013.

ICC-ES Evaluation Report**ESR-2074***

Reissued December 1, 2012

This report is subject to renewal February 1, 2015.

www.icc-es.org | (800) 423-6587 | (562) 699-0543

A Subsidiary of the International Code Council®

DIVISION: 08 00 00—OPENINGS

Section: 08 95 43—Vents/Foundation Flood Vents

REPORT HOLDER:**SMARTVENT PRODUCTS, INC.**
430 ANDBRO DRIVE, UNIT 1
PITMAN, NEW JERSEY 08071
(877) 441-8368www.smartvent.com
info@smartvent.com**EVALUATION SUBJECT:****SMART VENT® AUTOMATIC FOUNDATION FLOOD VENTS:**
FLOODVENT™ MODEL #1540-520; FLOODVENT™
STACKING MODEL #1540-521; SMARTVENT™ MODEL
#1540-510; SMARTVENT™ STACKING MODEL #1540-511;
WOOD WALL FLOOD MODEL #1540-570; WOOD WALL
FLOOD OVERHEAD DOOR MODEL #1540-574;
FLOODVENT™ OVERHEAD DOOR MODEL #1540-524;
SMARTVENT™ OVERHEAD DOOR MODEL #1540-514**1.0 EVALUATION SCOPE****Compliance with the following codes:**

- 2009 and 2006 *International Building Code*® (IBC)
- 2009 and 2006 *International Residential Code*® (IRC)

Properties evaluated:

- Physical operation
- Water flow

2.0 USES

The Smart Vent® units are automatic foundation flood vents (AFFVs) employed to equalize hydrostatic pressure on nonfire-resistance-rated foundation walls, rolling-type overhead doors and building walls subject to rising or falling flood waters. The Smart Vent® units are intended for use where flood hazard areas have been established in accordance with IBC Section 1612.3 or IRC Section R3222.1. Certain models also allow natural ventilation in accordance with Section 1203 of the IBC or Section 408.1 of the IRC.

3.0 DESCRIPTION**3.1 General:**

When subjected to pressure from rising water, the Smart Vent® AFFVs disengage, then pivot open to allow flow in either direction to equalize water level and hydrostatic

pressure from one side of the foundation to the other. The AFFV pivoting door is normally held in the closed position by a buoyant release device. When subjected to rising water, the buoyant release device causes the unit to unlatch, allowing the plate to rotate out of the way and allow flow. The water level stabilizes, equalizing the lateral forces. Each unit is fabricated from stainless steel. The SmartVENT™ Stacking Model #1540-511 and FloodVENT™ Stacking Model #1540-521 units each contain two vertically arranged openings per unit.

3.2 Engineered Opening:

The AFFVs comply with the design principle noted in Section 2.6.2.2 of ASCE/SEI 24 for a maximum rate of rise and fall of 5.0 feet per hour (0.423 mm/s). In order to comply with the engineered opening requirement of ASCE/SEI 24, Smart Vent AFFVs must be installed in accordance with Section 4.0.

3.3 Model Sizes:

The FloodVENT™ Model #1540-520, SmartVENT™ Model #1540-510, FloodVENT™ Overhead Door Model #1540-524, and SmartVENT™ Overhead Door Model #1540-514 units measure 15³/₄ inches wide by 7³/₄ inches high (400 by 196.9 mm). The Wood Wall Flood Model #1540-570 and Wood Wall Flood Overhead Door Model #1540-574 units measure 14 inches wide by 8³/₄ inches high (355.6 by 222.25 mm). The SmartVENT™ Stacking Model #1540-511 and FloodVENT™ Stacking Model #1540-521 units measure 16 inches wide by 16 inches high (406.4 by 406.4 mm).

3.4 Ventilation:

The SmartVENT® Model #1540-510 and SmartVENT® Overhead Door Model #1540-514 both have screen covers with 1/4-inch-by-1/4-inch (6.35 by 6.35 mm) openings, yielding 51 square inches (32 903 mm²) of net free area to supply natural ventilation. The SmartVENT™ Stacking Model #1540-511 consists of two Model #1540-510 units in one assembly, and provides 102 square inches (65 806 mm²) of net free area to supply natural ventilation. Other AFFVs recognized in this report do not offer natural ventilation.

4.0 INSTALLATION

SmartVENT® and FloodVENT™ are designed to be installed into walls or overhead doors of existing or new construction from the exterior side. Installation of the vents must be in accordance with the manufacturer's instructions, the applicable code and this report. The mounting straps allow mounting in wood, masonry and

*Revised July 2013

ICC-ES Evaluation Reports are not to be construed as representing aesthetics or any other attributes not specifically addressed, nor are they to be construed as an endorsement of the subject of the report or a recommendation for its use. There is no warranty by ICC® Evaluation Service, LLC, express or implied, as to any finding or other matter in this report, or as to any product covered by the report.

concrete walls up to 12 inches (305 mm) thick. In order to comply with the engineered opening design principle noted in Section 2.6.2.2 of ASCE/SEI 24, the Smart Vent® AFFVs must be installed as follows:

- With a minimum of two openings on different sides of each enclosed area.
- With a minimum of one AFFV for every 200 square feet (18.6 m²) of enclosed area, except that the SmartVENT™ Stacking Model #1540-511 and FloodVENT™ Stacking Model #1540-521 must be installed with a minimum of one AFFV for every 400 square feet (37.2 m²) of enclosed area.
- Below the base flood elevation.
- With the bottom of the AFFV located a maximum of 12 inches (305.4 mm) above grade.

5.0 CONDITIONS OF USE

The Smart Vent® AFFVs described in this report comply with, or are suitable alternatives to what is specified in, those codes listed in Section 1.0 of this report, subject to the following conditions:

5.1 The Smart Vent® AFFVs must be installed in accordance with this report, the applicable code and the manufacturer's installation instructions. In the event of a conflict, the instructions in this report govern.


5.2 The Smart Vent® AFFVs must not be used in the place of "breakaway walls" in coastal high hazard areas, but are permitted for use in conjunction with breakaway walls in other areas.

6.0 EVIDENCE SUBMITTED

Data in accordance with the ICC-ES Acceptance Criteria for Automatic Foundation Flood Vents (AC364), dated October 2007.

7.0 IDENTIFICATION

The Smart VENT® models recognized in this report must be identified by a label bearing the manufacturer's name (Smartvent Products, Inc.), the model number, and the evaluation report number (ESR-2074).

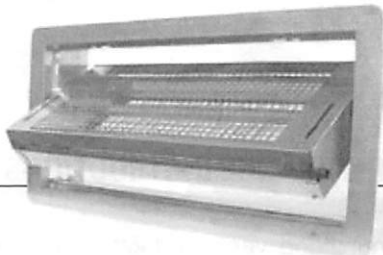

ONE YEAR LIMITED WARRANTY LIMITED, NON-PRORATED AND TRANSFERABLE

Any and all product(s) as manufactured by SMART VENT® are subject to a one year limited warranty in accordance with the following, provided that the products covered by this warranty have been installed in strict accordance with the SMART VENT® written installation instructions and in accordance with all local codes and standards. Cleaning and lubrication may be required, and is not covered by this warranty. SMART VENT® warrants to the original purchaser or a subsequent owner of the property that parts are free from manufacturing defects for 1 (one) year from the date of purchase. Security Clips must be installed to validate warranty.

Should any defect occur during the one-year period following the date of purchase, SMART VENT® will provide a replacement for that part deemed to be defective (but not including labor costs incurred in removing the part, installing the replacement part, or shipping).

In the event of replacement according to the terms of this warranty, the warranty on the replacement part will extend for the balance of the original warranty period, which is in effect at the time the part proves defective.

LIMITATIONS

SMART VENT® shall not be liable for, and this warranty does not apply to, any failure, defect or damage resulting from or connected with painting, misuse, abuse, neglect or improper handling or storage, or installation not in strict adherence to SMART VENT® written instructions. SMART VENT® reserves the right to discontinue or modify any of its products, including color, and shall not be liable as a result of such discontinuance or modification. If SMART VENT® replaces any part under this warranty, it may substitute parts designated by SMART VENT® to be of comparable quality or price range in the event the product initially installed has been discontinued or modified.

OTHER CONDITIONS

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER ORAL OR WRITTEN WARRANTIES, LIABILITIES OR OBLIGATIONS OF SMART VENT®. PERTINENT STATE LAW SHALL CONTROL FOR WHAT PERIOD OF TIME SUBSEQUENT TO SALE A CONSUMER/HOMEOWNER MAY SEEK A REMEDY PURSUANT TO THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL SMART VENT® BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING ANY DAMAGE TO THE BUILDING, ITS CONTENTS OR ANY PERSONS THEREIN, RESULTING FROM THE BREACH OF ANY WARRANTY SET FORTH HEREIN. NO REPRESENTATIVE OF SMART VENT® OR ITS DISTRIBUTORS OR DEALERS IS AUTHORIZED TO MAKE ANY CHANGE OR MODIFICATION TO THIS WARRANTY.

Lit-006





MATERIAL REVIEW & MAINTENANCE INSTRUCTIONS

Objective:

When we set out to design our flood vent products, a comprehensive study was conducted to determine the most important design attributes that would be needed to insure that our customers received the best product available. Because our company started on the shores of the East Coast of New Jersey, everyone placed durability as their number one concern.

Durability:

After extensive research, including review of many less expensive materials, we choose to make the bulk of the components for our vents from stainless steel. Salt will pit stainless steel unless it is rinsed with water. We recommend that the vent be washed with fresh water twice a year. Any red rust or minor surface pitting can be removed with "commercial de-rusting solutions."

The mechanism that operates the automatic louvers on models 1540-510, 1540-511, 1540-514 and 1540-550 is also entirely made from stainless steel, and water rinsing will reduce corrosion and dirt build-up. Prior to final inspection and testing, the louver mechanism is lubricated with a dry film lubricant. This over the counter lubricant should be applied at minimum one time per year, or when needed. Rinse the louver mechanism, let dry, then spray all of the moving parts. Note: Wet lubricants or grease will allow dirt and sand to accumulate on the moving parts. Use only dry film lubricants.

The bi-metal coil is made from highly engineered materials. The composite contains a large portion of Nickel and the finished coil is secondarily heat-treated, which forms a protective barrier to protect it from the elements. A squirt of dry film lubricant into the coil chamber during maintenance will extend its life.

The floats are manufactured from engineered plastics. An ultra-violet inhibitor was blended into the raw material before molding to insure that the sun does not degrade the functional or dimensional characteristics of the material. Insert a thin blade or a credit card into each side of the vent door's float slot, and the door will easily push open. Rinse the float cavity, then apply a small amount of dry film lubricant on the float, where it contacts the frame.

Like any product, the care one gives will determine its life. We have used the best American materials, along with the best engineering and manufacturing professionals to build our products. With just a little care, your vents will function carefree for many years.



SMART VENT

www.smartvent.com • 877-441-8368



Smart VENT

877- 441- 8368

www.smartvent.com

INSTALLATION INSTRUCTIONS & DETAILS

MODELS 1540-510 & 1540-520

**DUAL FUNCTION FLOOD AND VENTILATION VENT &
FLOOD VENT INSULATED**

REV. C 05-01-09

INSTALLATION INSTRUCTIONS

1. Remove vent door from vent frame. (Turn upside down, rotate bottom of door outward and slide out)
2. Prepare a CLEAN 16.25" wide by 8.25" high rough opening (approx. 1 block wide X 1 block high) for each vent. Ensure the bottom of the rough opening is no more than 12" above the finished inside or outside grade whichever is higher
3. Apply a bead of polyurethane caulk around the back of the flange on the vent frame. (FIG. 2)
4. Bend the 4 steel straps to the thickness of the wall measuring from the end with the teeth see STRAP DETAIL
5. Insert the top straps into the top two strap slots about two clicks.
6. Insert the vent frame in the cut opening. The bent strap ends go in then up behind the inside of the wall.
Push the frame tight against the face of the wall. Ensure the frame is flush and square in the opening. (FIG. 3)
7. Reach through the vent opening and click the two straps in while holding the front of the vent against the wall face. The sharp point of the straps should not extend past the front of the vent face. Install the two remaining bottom straps.
8. Re-check that frame is square and slots are clear of debris, and caulk.
9. Install the door into frame by grasping the bottom of door (with float pins down) and front (small screen in front). Slide door into frame and rotate until it is latched.
10. To open the door insert two credit cards into the float slots as shown in the diagram. This will unlatch the door for removal and cleaning.

MODEL 1540-510

DETAILED SPECIFICATIONS:

MATERIAL: STAINLESS STEEL

OPERATION FLOOD: AUTOMATIC NON-POWERED ACTIVATION AND OPERATION

VENT REMAINS CLOSED AND LOCKED UNTIL ACTIVATED

OPERATION AIR: AUTOMATIC LOUVERS FULLY OPEN AT 75 DEG. FULLY CLOSED AT 35 DEG. NO POWER REQUIRED

INSTALLATION:

SECURED W/ 4 STAINLESS STEEL STRAPS SUPPLIED

HYDROSTATIC RELIEF: 200 Sq. Ft per Vent

VENTILATION: 51 Sq. in. per Vent NOTE: VAPOR BARRIER ALLOWS FOR REDUCED VENTILATION

REQUIREMENTS FLOOD: MINIMUM OF 2 VENTS PER ENCLOSED AREA MOUNTED ON AT LEAST TWO DIFFERENT WALLS

COLORS: STAINLESS (STANDARD)

EXTERIOR POWDER COATED WHITE, WHEAT, GRAY, AND BLACK (AVAILABLE)

MODEL 1540-520

DETAILED SPECIFICATIONS:

MATERIAL: STAINLESS STEEL

OPERATION: AUTOMATIC NON-POWERED ACTIVATION AND OPERATION

INSTALLATION:

SECURED W/ 4 STAINLESS STEEL STRAPS SUPPLIED

HYDROSTATIC RELIEF: 200 Sq. Ft per Vent

REQUIREMENTS: MINIMUM OF 2 VENTS PER ENCLOSED AREA MOUNTED ON AT LEAST TWO DIFFERENT WALLS

COLORS: STAINLESS (STANDARD)

EXTERIOR POWDER COATED WHITE, WHEAT, GRAY, AND BLACK (AVAILABLE)

MEETS THE REQUIREMENTS FOR ENGINEERED OPENINGS AS SET FORTH BY:
FEMA, NFIP, ICC, & ASCE

SUPPORTIVE DOCUMENTS, TB 1-08, 44CFR 60.3(C)(5), ASCE 24-05
ICC EVALUATION # ESR-2074 EVALUATED UNDER AC-364

DETAIL DIAGRAM MODELS 1540-510 & 1540-520 DUAL FUNCTION FLOOD AND VENTILATION VENT & FLOOD VENT INSULATED

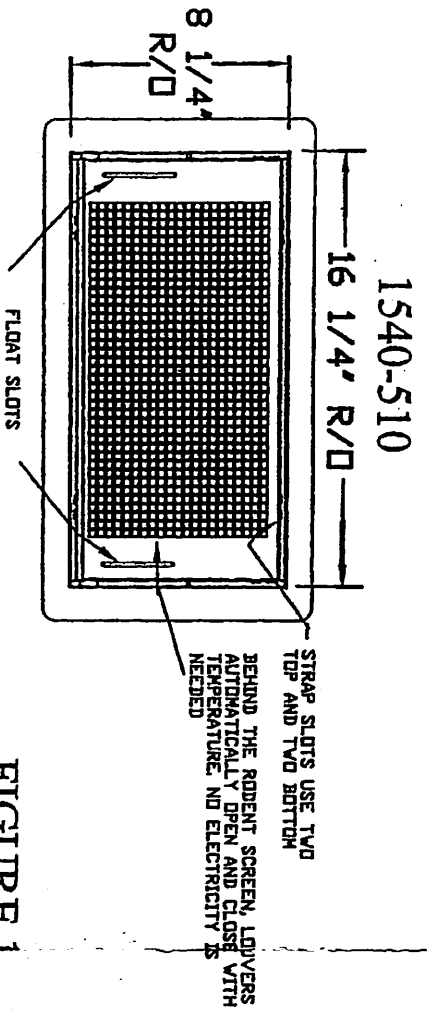


FIGURE 1

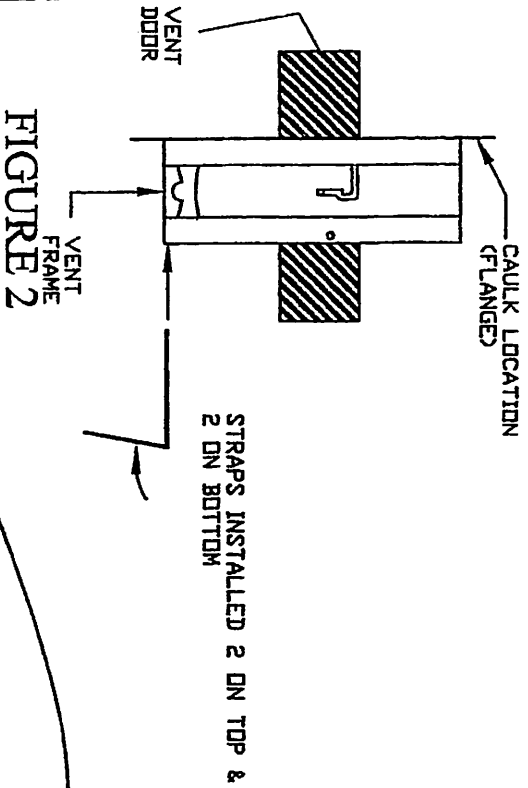
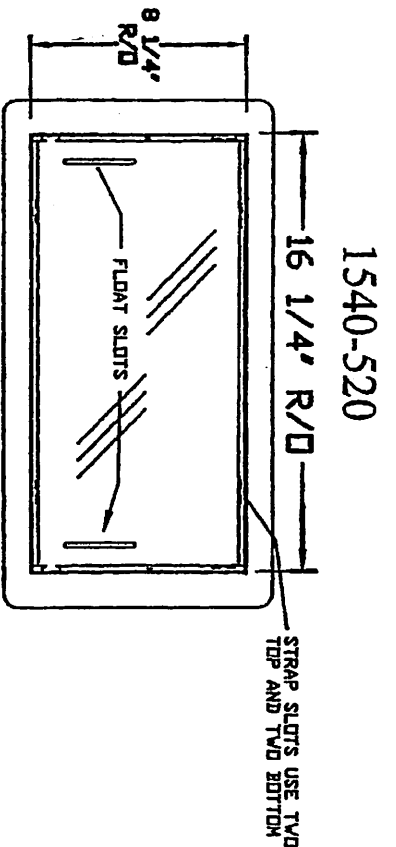


FIGURE 2

STRAP DETAIL.
 TEETH MUST CLICK IN TIGHT TO INSURE
 SECURE INSTALLATION.


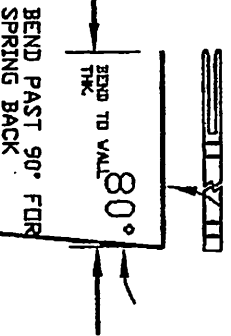


FIGURE 3

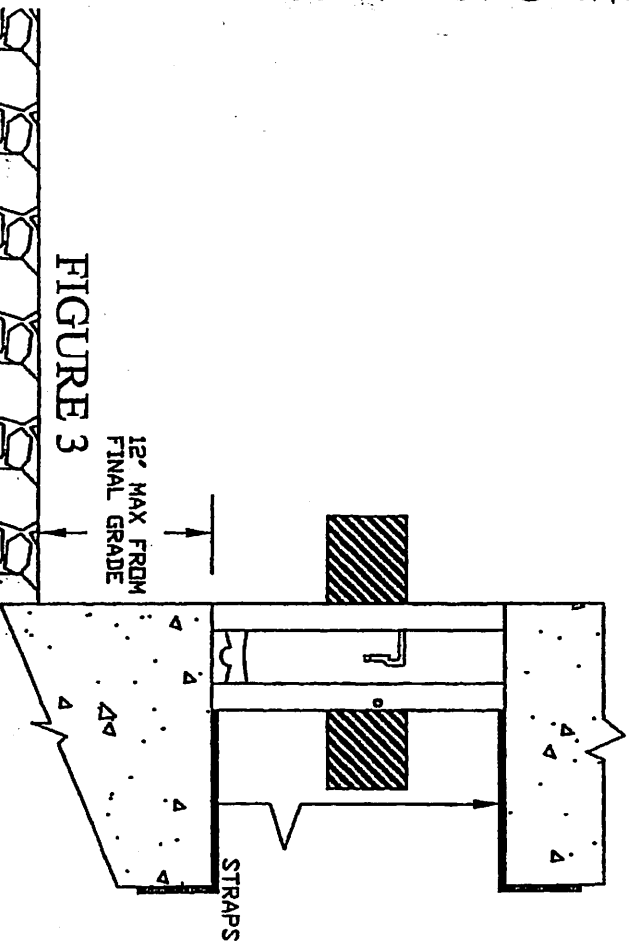

TOLERANCES UNLESS OTHERWISE SPECIFIED		Smart VENT®		Smart VENT Foundation Flood Vents	
XX	±.005	877-441 8368	450 Andro Dr.	Rev	
XXX	±.005	WWW.SMARTVENT.COM	Pittman NJ 08071	C	
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SMART VENT INC. ANY REPRODUCTION OR USE OF THIS DRAWING WITHOUT THE WRITTEN PERMISSION OF SMARTVENT INC. IS PROHIBITED.		DUAL FUNCTION FLOOD AND VENTILATION VENT & FLOOD VENT INSULATED		DATE: 2-1-07	
SIZE: A		DWG NO.: 1540-5XX		SHEET 1 OF 2	